



# somfy® SERIAL CONNECTIONS

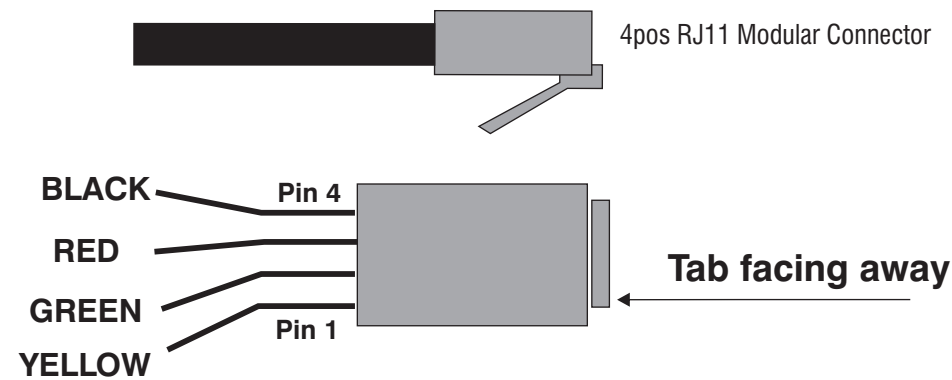

## OmniPro, Omni Ile & OmniLT Controllers

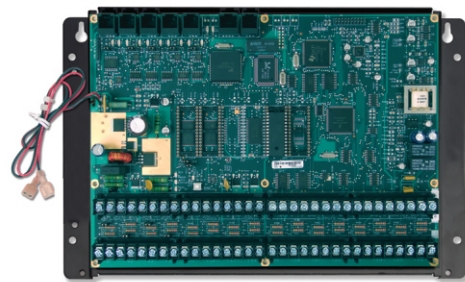

SIGNAL	HAI	SOMFY RJ45	SOMFY DB9	ST30 MOTOR
A (-)	1	2		Black
RX	2	3	3	
TX	1	6	2	
B (+)	2	1		Red
GND	4	8	5	

NOTE: The HAI OmniPro Serial Ports are wired for both RS485 & RS232. It will NOT communicate with both protocols simultaneously. Jumpers JP1 - JP5 on the OmniPro must be moved to the RS485 position to use that protocol.