QUICK PROGRAMMING FOR OUTDOOR SUNIS WIREFREE SENSOR



STEP 1: Place Sunis in a sunny area to charge for 10 minutes.



STEP 2: Completely retract the awning. Then press the PROGRAMMING BUTTON on the back of the original remote using a paper clip, pen or similar device until the awning jogs.



STEP 3: Press the PROGRAMMING BUTTON on the back of the Sunis until the awning jogs.



STEP 4: Turn intensity knob on the Sunis completely counter clockwise and allow direct sunlight to shine on the front for 2 minutes.

The awning should extend. Make adjustments to the sensitivity and mount it in the path of direct sunlight.

70